



PLAZMAMAN

HONDA CIVIC FL5

OEM.

REPLACEMENT

INTERCOOLER

HONDA CIVIC FL5 OEM REPLACEMENT INTERCOOLER INSTALLATION GUIDE

REMOVE 12 PLASTIC CLIPS ABOVE THE
FRONT BUMPER – 2 ARE HIDDEN UNDER
THE WEATHER STRIP.



REMOVE 14 PLASTIC CLIPS UNDERNEATH THE FRONT BUMPER, ALONG THE FRONT EDGE.




REMOVE 2 SCREWS AND 1 PLASTIC
HOLDING THE INNER WHEEL WELL ON
EACH SIDE.



REMOVE 1X SCREW ON EACH SIDE TOP
REAR OF THE BUMPER ON EACH SIDE
HOLDING IT TO THE GUARD.



REMOVE 1X RADAR PLUG AND 2X FLOG LIGHT ELECTRICAL PLUGS.

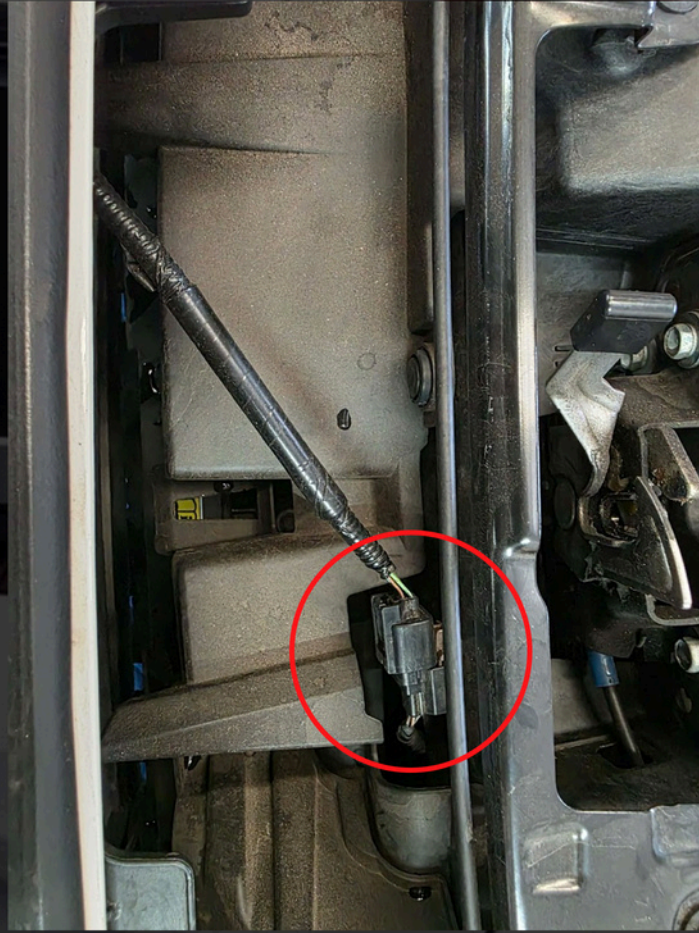

REMOVE 2X BOLTS ON EACH FLANGE OF THE OEM INTERCOOLER (4X IN TOTAL)
REMOVE 2X INTERCOOLER BRACKETS ON EACH SIDE, 2X BOLTS.

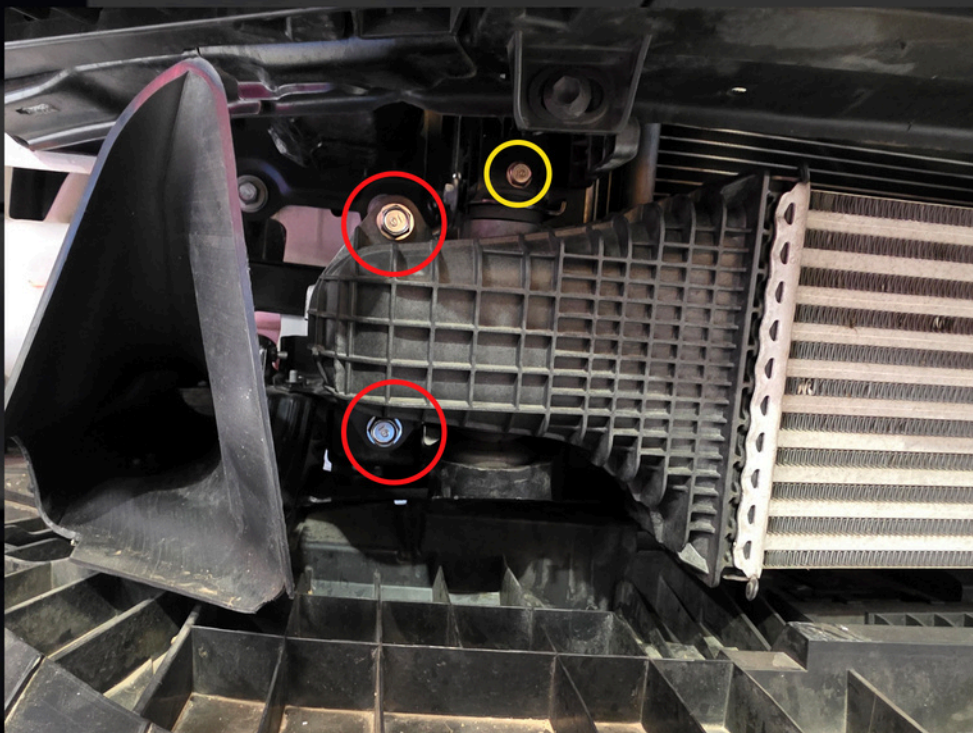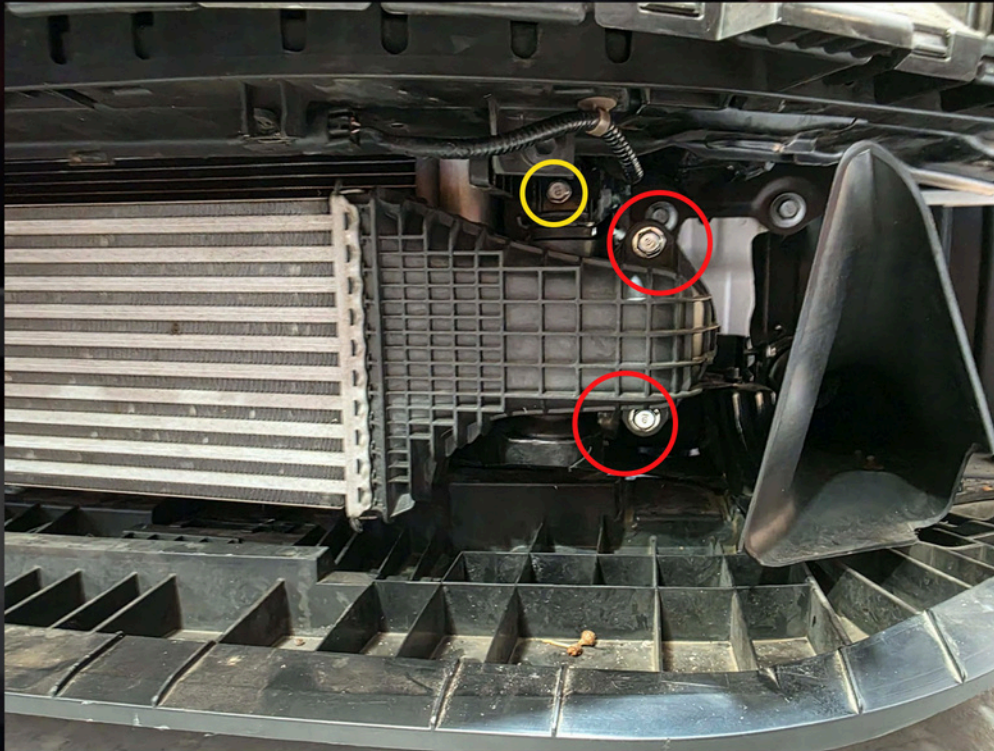

REMOVE THE INTERCOOLER.

UTILIZE THE 4 OEM RUBBERS FROM THE OEM INTERCOOLER MOUNTS FOR DIRECT REPLACEMENT PLAZMAMAN INTERCOOLER.

FOLLOW THE PREVIOUS STEPS IN REVERSE TO INSTALL.

